


## Piping

You can both make corded piping tape and apply the piping tape to a hemline using the piping foot (optional foot).

Machine Settings:

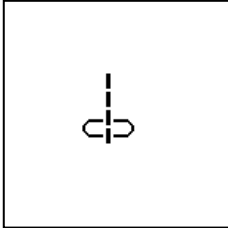

Foot: Piping Foot (optional foot)

Foot Pressure: 3

Needle Position: Center

Stitch Length: 1.0 - 3.0

Stitch Tension: 3.0 - 5.0

Needle Thread: All-Purpose Thread

Bobbin Thread: All-Purpose Thread

Cord: Heavyweight Yarn (less than 5 mm)

### Making the corded piping tape

1. Cut 3 cm (1 1/4") bias strips from the fabric and join the strips if necessary.
2. Wrap bias around the cord with the right side of the fabric out. Pin or baste for even seaming edges.
3. Place the corded piping tape under the foot, setting the corded part of the tape in the one of grooves on the bottom of the foot.
4. Start sewing.



### **Applying the corded piping tape to a hemline**

1. Place the corded piping tape on the right side of the cloth under the foot. Make sure that the edge of the tape matches the edge of the cloth.
2. Lower the foot so that the corded part of the tape fits the one of grooves on the bottom of the foot.
3. Sew the tape on the cloth while guiding it into the left groove as shown.

