
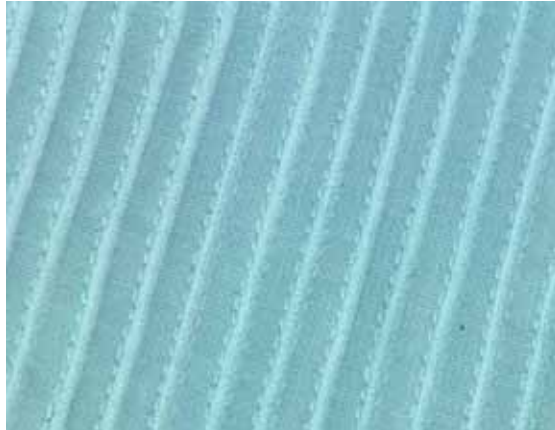


Corded Pintucks

Machine Settings:

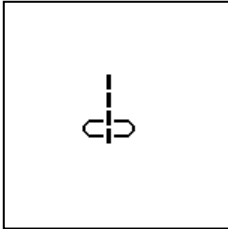

Foot: Pintuck Foot (optional foot)

Pintucking Cord Guide (optional accessory)

Foot Pressure: 3

Needle Position: Center

Stitch Length: 1.8 - 2.0

Stitch Tension: 7.0 - 9.0

Needle Thread: All-Purpose Thread

Bobbin Thread: All-Purpose Thread

Cord: Embroidery Floss, Yarn, etc.

Needle: Twin Needle (2 mm)

1. Insert the twin needle into the machine. Select the straight stitch, and set stitch length between 1.8 - 2.0 and thread tension between 7.0 - 9.0.
2. Remove the hook cover, and set the pintucking cord guide to the machine.
3. Pass the cord through the pintuck cord guide.
4. Set the fabric under the presser foot, lower the foot and start sewing. Be sure to continually check that the cord is properly passing through



the guide as you sew.

Tips:

- * Use dark-colored cord with thin, transparent fabric to obtain a shadow effect.
- * To achieve shadowed pintucks, attach the pintuck cord guide and place DMC embroidery floss in the guides to the left and right of the center guide.
- * Shallow-grooved guides can accommodate cords up to 1.5 mm in diameter; deep-grooved guides, between 1.5 - 2.5 in diameter.

